

# Q

De thermostaatknop regelt een radiator op basis van temperatuur. De thermostaatknop is voorzien van een M30x1,5 aansluiting en is daardoor geschikt voor verschillende merken radiatorcranken.


De thermostatische werking houdt de temperatuur in de ruimte constant, goed voor zowel comfort als milieu. De vorstvrij stand beschermt de cv-installatie. De knop is verkrijgbaar in verschillende kleuren, zo is er voor ieder interieur en iedere smaak een match.

<b>Materiaal 1</b>	Hpb 57-3
<b>Materiaal 2</b>	ABS
<b>Waarde Thermostaatknop *</b>	6 °C
<b>Waarde Thermostaatknop 1</b>	12 °C
<b>Waarde Thermostaatknop 2</b>	16 °C
<b>Waarde Thermostaatknop 3</b>	20 °C
<b>Waarde Thermostaatknop 4</b>	24 °C
<b>Waarde Thermostaatknop 5</b>	28 °C
<b>Aansluiting</b>	M30x1,5
<b>Bevestigingsmethode</b>	Handmatig

The thermostatic head controls a radiator based on temperature. The thermostatic head comes with a M30x1.5 connection and is therefore suitable for different brands of radiator valves.

The thermostatic operation keeps the temperature in the room constant, good for both comfort and environment. The frost-free position protects the central heating system. The knob is available in different colours, so there is a match for every interior and taste.

<b>Material 1</b>	Hpb 57-3
<b>Material 2</b>	ABS
<b>Value Therm. Head *</b>	6 °C
<b>Value Therm. Head 1</b>	12 °C
<b>Value Therm. Head 2</b>	16 °C
<b>Value Therm. Head 3</b>	20 °C
<b>Value Therm. Head 4</b>	24 °C
<b>Value Therm. Head 5</b>	28 °C
<b>Connection</b>	M30x1.5
<b>Fastening method</b>	Manual

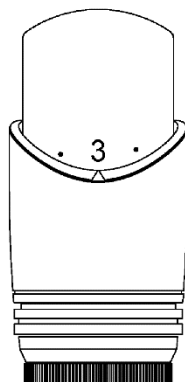



## NL

1. Draai de thermostaatknop volledig open (stand 5).
2. Plaats de thermostaatknop op de radiatorkraan en draai de ring van de knop één slag op het schroefdraad van de kraan, maar nog niet helemaal vast.
3. Positioneer de knop zodanig dat deze in positie valt, hou de knop zo vast en draai dan de ring van de knop helemaal vast.
4. Selecteer de gewenste stand. 2 wordt aanbevolen voor slaapkamers, 3 voor woonkamers en 4 voor badkamers.

Let op: Draai de ring niet te strak aan, dit kan de onderdelen beschadigen. Gebruik geen tang of ander gereedschap.

## EN

1. Turn the thermostatic head completely open (position 5).
2. Place the thermostatic head on the radiator valve and turn the ring of the knob one turn onto the thread of the valve, but do not tighten it completely.
3. Position the knob so that it falls into position, hold the knob in this position and then tighten the ring of the knob completely.
4. Select the desired position based on the room. 2 is recommended for bedrooms, 3 for living rooms and 4 for bathrooms.

Note: Do not overtighten the ring, as this may damage the components. Do not use pliers or other tools.

